
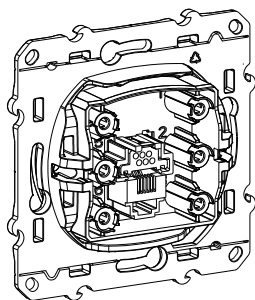


# Odace

S5--497 / S5--494 (RITA)


fr RJ12 6 cont à vis  
 es Toma RJ-12 6 cont.  
 nl RJ12 contactdoos met schroeven  
 pt Tomada RJ12-6 contactos  
 en RJ12 6 cont screw

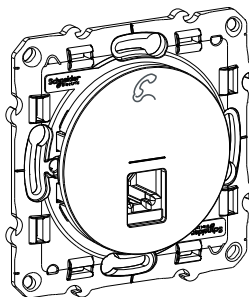


		RJ12					
Ref.	fr Borne es Borne nl Klem Pt Connector en Connector	1	2	3	4	5	6
S5--497	fr Symbole es Símbolo nl Simbool pt Símbolo en Symbol	2	TX	L2	L1	TS	T
S5--494 RITA	fr Symbole es Símbolo nl Simbool pt Símbolo en Symbol						

S5--496

fr Conjoncteur téléphonique 8P  
 es Toma telefonica FR 8 cont  
 nl Telefoonaanluiting franse standard  
 pt Tomada telefonica FR 8 cont  
 en Phone conjoncteur 8 pins

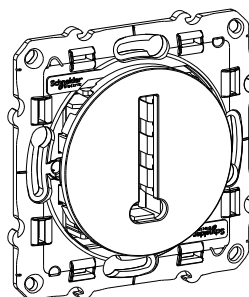


Branchment Standard  
 French Telecom Set 3

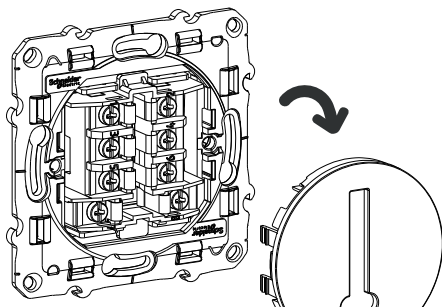

Gris (1)





Blanc (3)

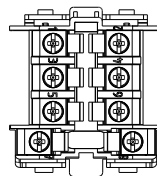


S5--498

fr Prise Belgacom 5 pins pour téléphone  
 es Toma Belga teléfono 5 pins  
 nl Telefoonaanluiting Belgacom  
 pt Tomada Belga telefono 5 pins  
 en Belgacom phone socket 5 pins

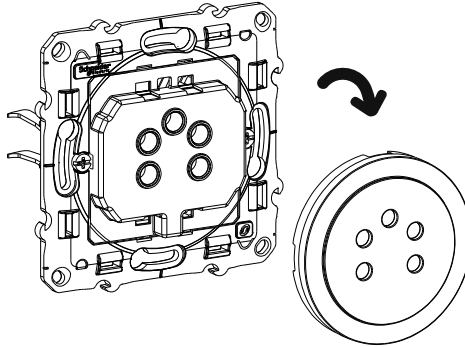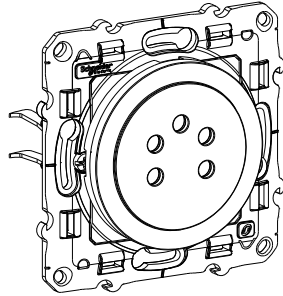


S520xxx



1

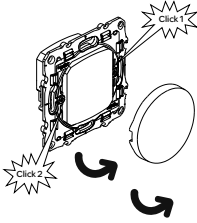

2

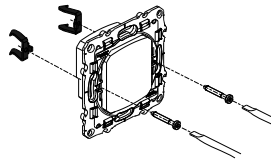


3

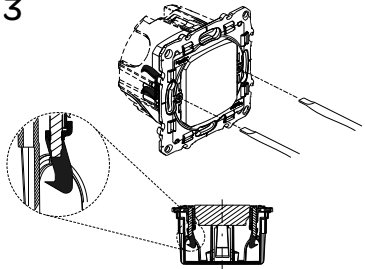

S525xxx

1+2

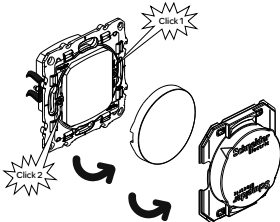

4

